

Venueinfo Rockefeller – Oslo Norway

Update: Jan 2010 ØB

- Venue:** Rockefeller Music Hall
- Venue type:** Club with 2 balconies, mainly standing audience.
- Capacity:** 1300 standing
- Address:** Torggata 16, N-0181 Oslo, Norway
Load in - Mariboegate
- Phone/Fax/Mail:** Switchboard (+47) 22 20 32 32
Prod. Office (analog) (+47) 22 03 48 18
Prod. Office (analog) (+47) 22 03 48 19
Prod. fax / Admin. Fax (+47) 22 11 04 69
e-mail post@rockefeller.no
web www.rockefeller.no
- Parking:** Must be arranged in advance. Shore power: 2x16A, 230V Schuko.
- Load in:** Street level, up a 15m steep ramp to 2nd floor, 15m push to stage.
- Stage:** 11m wide, 6m deep.
1,25m high (no fire curtain).
Clearance 6,9m to house rig (see drawings)
- Rigging:** Points can be made above the stage around concrete beams and a separate I-beam for touring productions.
House lighting rig flown by 4 x 800Kg-travelling motors.
House PA flown by 2 x 1000Kg travelling motors
2 x 1250Kg travelling motors available for touring productions.
- House lighting:** 52 channels dimmer system, Pearl 2004 mixer, 70 single par64. All cp-61. 1 cracked oil machine - MDG
1 house follow spot, fixed position on balcony.
Full specs. : http://www.rockefeller.no/specs/light_specs_rockefeller.pdf
- Mixer position:** 10m from stage in front of balcony stairs, underneath the balcony, clearance 3,3m.
- House PA:** Midas Heritage 2000, EAW system: 8 x EAW KF750F, 4 x EAW KF755F, 4 x EAWSB750Fi, 8 x EAW SB1000z , CROWN amps.
Full specs: http://www.rockefeller.no/specs/sound_specs_rockefeller.pdf
- Power:** The power system in Rockefeller is the Delta system 230V.
The system has 3 phases + ground but no neutral.
We charge a fee for transformers to get the Star system.
The Star system has 3 phases + ground and neutral.

Star will give 230V between any phase and neutral and 380V between any two phases.

Power points: 1 x 125A - 230V, 3 phases for lights (Delta), stage left.
1 x 63 amp - 230V, 3 phases for sound (Delta), stage left.
Again transformers may be used for Star (5 wire) power.
This will give you:
1 x service, 3x140A, 400V, neutral and earth, Cam-lok for lights.
1 x service, 3x63A, 400V, neutral and earth, Cee-form for sound.

Dressing rooms: All rooms situated backstage. 1 x large lounge
2 x small rooms. 2 x toilets with sink and 1 x shower.
1 x medium size room with private toilet, sink, hot/cold water.

Production office: 1 x room situated backstage.
Production phone no's: +47 22 03 48 18/19.

Catering area: One medium room with kitchen facilities available at the back of the venue.

Standard running times:

Load in:	As required
Doors:	20.00 Sun. - Thurs
Doors:	21:00 Fri. - Sat.
Show:	21.30 Sun. - Thurs.
	22.30 Fri. - Sat.

Please note: No amplified noise or soundcheck before 17:00 on weekdays, due to shops and offices in the building. Saturday and Sunday no noise before 14:00.

NOTE: Fire ails around the stage.
No stacking of equipment in these ails.
Smoke machine and pyro requires Fire chief. Pyro also requires permit from Fire dept. Please forward info.

Venue Manager
mail Roar Gulbrandsen
roar@rockefeller.no

Booking:
mail Vegard Engelsvoll
vegard@rockefeller.no
phone (+47) 22 03 48 14

Booking
mail Bo Hustoft
bo@rockefeller.no
phone (+47) 22 03 48 01

Tech.manager
mail Ørjan Bjørnevik
orjan@rockefeller.no
phone (+47) 22 03 48 24
cellular (+47) 90 01 20 17