

Venueinfo Rockefeller – Oslo Norway

Update: Nov 2017 ØB

- Venue:** Rockefeller Music Hall
- Venue type:** Club with 2 balconies, mainly standing audience.
- Capacity:** 1300 standing
- Address:** Badstugata 2, N-0183 Oslo, Norway
Load in – Mariboesgate 5B
- Contact info:** Switchboard (+47) 22 20 32 32
e-mail post@rockefeller.no
web www.rockefeller.no
- Parking:** Must be arranged in advance. Shore power: 2x16A, 230V Schuko.

EXCESSIVE IDLING OF TRUCKS AND BUSES IS AGAINST THE LAW – Because of the health and environmental risks. (Take care of the environment and next door neighbours while visiting our venue. Thanks!)
- Load in:** Street level, up a 15m steep ramp to 2nd floor, 15m push to stage.
- Stage:** 11m wide, 6m deep.
1,25m high (no fire curtain).
Clearance 5, 94m to house rig
- Rigging:** Points can be made above the stage around concrete beams and a separate I-beam for touring productions.
House lighting rig flown by 4 x 1000Kg-travelling motors.
House PA flown by 2 x 1000Kg travelling motors
2 x 1250Kg travelling motors available for touring productions.
- House lighting:** 52 channels dimmer system, GrandMa 2 Light, Clay Paky Mythos, Clay Paky K10, 60 single par64 - All cp-61. MDG hazer. 1 house follow spot, fixed position on balcony.
Full specs. : http://www.rockefeller.no/specs/light_specs_rockefeller.pdf
- Mixer position:** 10m from stage in front of balcony stairs, underneath the balcony, clearance 3,3m.
- House PA:** Midas ProX/Pro2, EAW system: 8 x EAW KF750F, 4 x EAW KF755F, 4 x EAWSB750Fi, 8 x EAW SB1000z , CROWN amps.
Full specs: http://www.rockefeller.no/specs/sound_specs_rockefeller.pdf
- Power:** The power system in Rockefeller is the Delta system 230V.
The system has 3 phases + ground but no neutral.

Power needs must be arranged minimum two weeks in advance.
We charge a fee for transformers to get the Star system.
The Star system has 3 phases + ground and neutral.

Power points: 1 x 125A - 230V, 3 phases for in-house lights (Delta).
1 x 63 amp - 230V, 3 phases for in-house sound (Delta).

Again transformers may be used for Star (5 wire) power.
Available 400V Star:
1 x service, 3x90A, 400V, neutral and earth,
Connectors: Powerlock or 63A Cee-form.
1 x service, 3x44A, 400V, neutral and earth,
Connectors: Cee-form 63A or 32A

Dressing rooms: All rooms situated backstage. 1 x large lounge
2 x small rooms. 2 x toilets with sink and 1 x shower.
1 x medium size room with private toilet, sink, hot/cold water.

Production office: 1 x room situated backstage.

Catering area: One medium room with kitchen facilities available at the back of the venue.

Standard running times:

Load in: As required
Doors: 20.00
Show: 21.30

Please note: No amplified noise or soundcheck before 17:00 on weekdays, due to shops and offices in the building. Saturday and Sunday no noise before 14:00.

NOTE:

Fire ails around the stage.
No stacking of equipment in these ails.
Smoke machine and pyro requires Fire chief. Pyro also requires permit from Fire dept. Please forward info.

Venue Manager
mail

Roar Gulbrandsen
roar@rockefeller.no

Booking
mail
phone

Vegard Engelsen
vegard@rockefeller.no
(+47) 22 03 48 14

Booking
mail
phone

Bo Hustoft
bo@rockefeller.no
(+47) 22 03 48 01

Booking
mail
phone

Joakim Throndsen
joakim@rockefeller.no
(+47) 22 03 48 26

Tech.manager
mail
phone

Ørjan Bjørnevik
orjan@rockefeller.no
(+47) 22 03 48 24